


Adjusting the Tension on the Chain of the SR-3050




- REQUIRED TOOLS**
1. Phillips Screw Driver
 2. Allen Wrench - 3.5
 3. Allen Wrench - 3.0

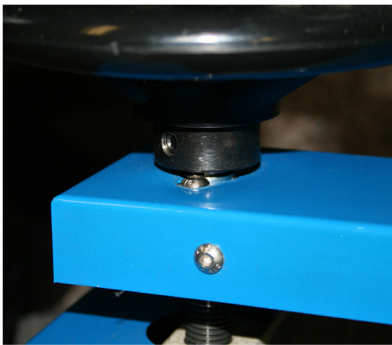


1. Locate the two adjuster screws.
Usually located on the gear side




2. Loosen both set screws at the base of the handwheel.

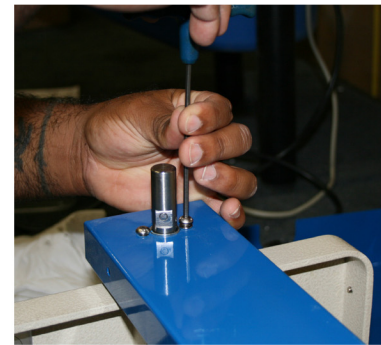


3. Loosen both adjuster screws.

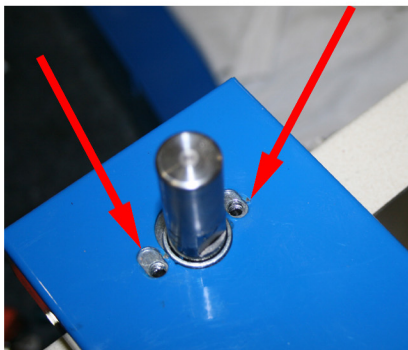

NOTE: The chain's tension is controlled by moving the chain guard forward or backward then tightening the adjuster screws.

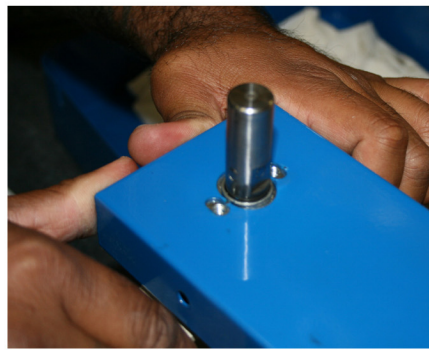

4. Pushing forward on the chain guard will create tension on the chain. Pulling back on the guard in the other direction will cause slack in the chain.

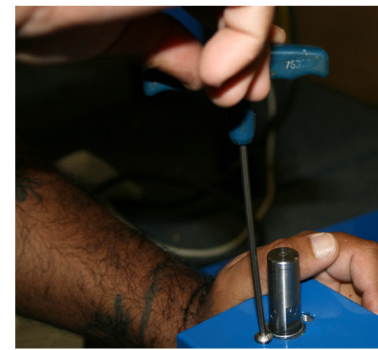

5. When you reach your desired chain tension, continue to apply pressure while tightening the adjuster screw. Re-mount and secure the handwheel.